 




The World's **Sixth Sense**®

Getting Started with SpinView

1. Download the Spinnaker® SDK from our [downloads](#) page.
2. Follow the installation instructions.
3. Connect your camera to your computer.
4. Launch SpinView:
Start Menu-->All Programs-->Spinnaker SDK-->SpinView
Your camera appears in the Devices pane.
5. Double-click on your camera to start streaming.

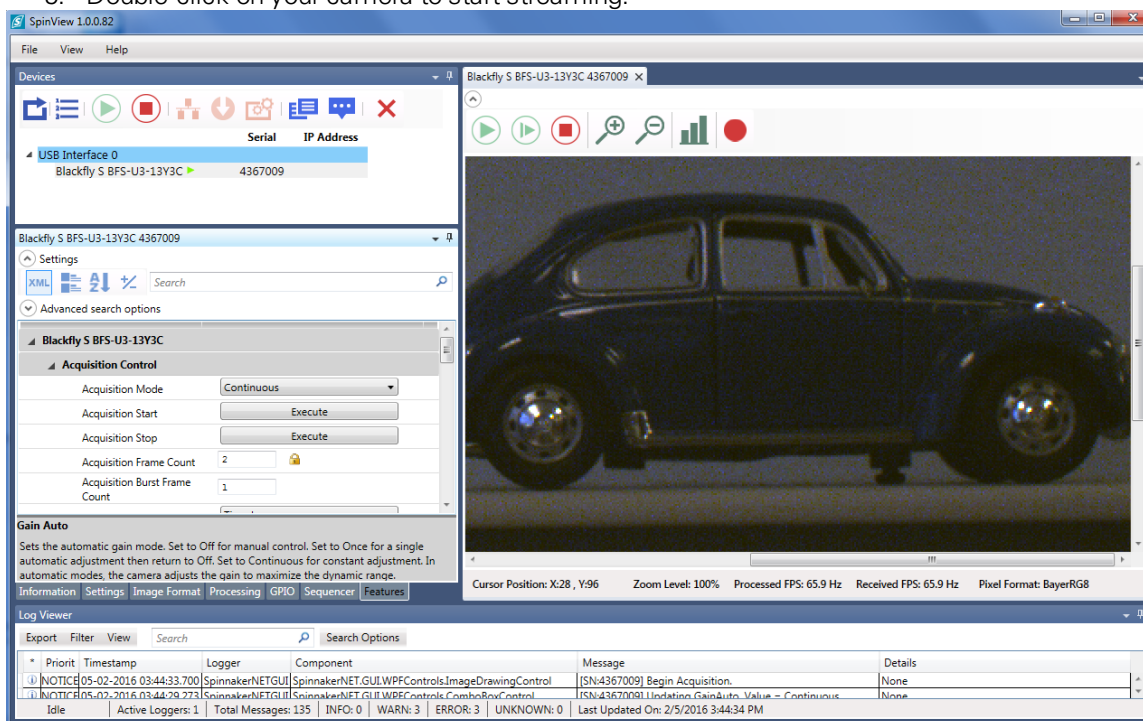

Further configuration of the camera can be done using the Features pane described below.

Navigating SpinView

Menus


















There is a main menu at the top of the SpinView window.

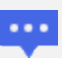

Menu	Function
File-->Exit	Closes the SpinView application
View-->Dynamic Dialogs	Opens dialogs in the Features pane, grouped by function. These are also accessible via tabs at the bottom of the Features pane.
View-->Rendering Methods	Switch between CPU and GPU rendering methods
View-->Reset View to Default	Restore window layout to the default view
View-->Resest Application Settings	Reset and load default settings at next launch
View-->Get Timing Performance	Opens a timing profile log for debugging. This can be copied to the clipboard.
Help-->About	Opens the About SpinView dialog

There are also shortcut menus accessible via right-click available in the Devices pane, Features pane, and Display pane.

Buttons

Toolbar buttons are available for many functions.

Button	Toolbar	Function
	Devices Pane	Refresh the devices list
	Devices Pane	Display all adaptors in the Devices pane
	Devices Pane Display Pane	Start acquisition
	Devices Pane Display Pane	Stop acquisition
	Devices Pane	Configure device IP address. Only applicable to GigE cameras.
	Devices Pane	Switch Device Driver. Opens the Driver Configuration window.
	Devices Pane	Update device firmware. Opens the Firmware Update window.
	Devices Pane	Copy camera properties to clipboard
	Devices Pane	Show camera properties. Opens the Properties window.
	Devices Pane	Disconnect the camera
	Display Pane	Single image acquisition
	Display Pane	Save image to disk
	Display Pane	Zoom in / Zoom out
	Display Pane	Display histogram. Opens the Histogram window.
	Display Pane	Open Recording window
	Features Pane	Sort features by XML sequence
	Features Pane	Sort features by category

Button	Toolbar	Function
	Features Pane	Sort features alphabetically
	Features Pane	Expand/collapse all nodes


Main Window


The SpinView main window is divided into separate panes. You can resize, float, or dock these panes.

- **Devices** - lists all connected devices, or all adapters
- **Display** - displays the current image acquisition along with acquisition settings and image chunk data (if enabled)
- **Features** - lists all features for the selected camera features in order to view and control camera parameters
- **Log Viewer** - lists all system messages, errors, and warnings

Devices Pane

The Devices pane shows adapters with cameras currently connected to them or all adapters. Select a camera to load its features.

To toggle between views, click 

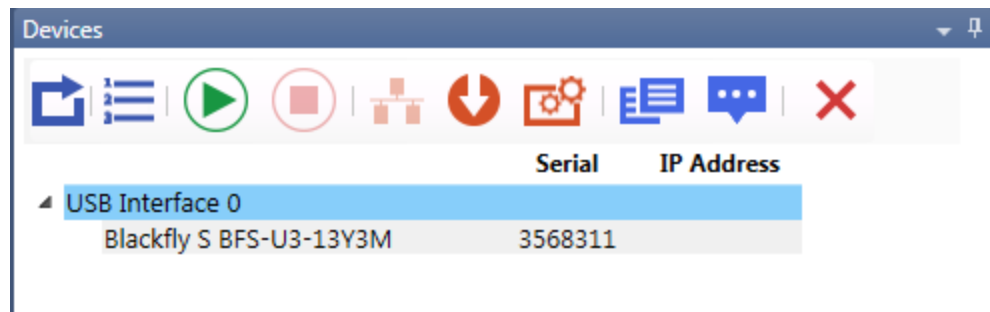

Devices Pane - Cameras Connected

 
To refresh the devices list click 

Features Pane

The features pane displays the features of the selected camera and provides access to managing the camera parameters.

By default, the features pane displays the Features tab.

Groups of features can also be accessed through tabs at the bottom of the features pane.

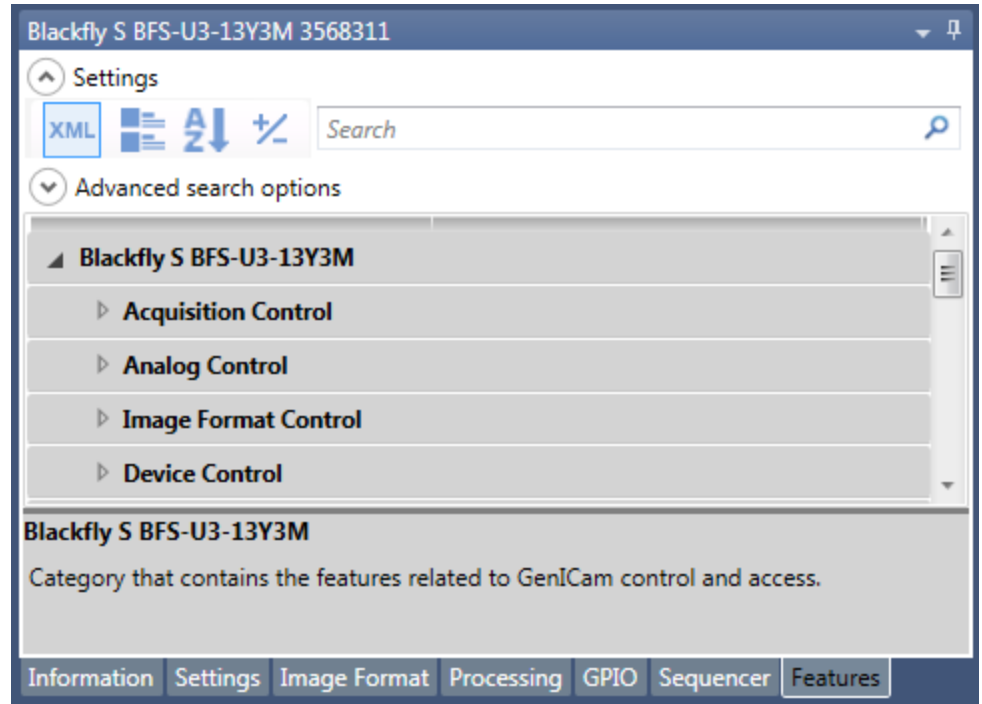

Features Tab

These features are grouped by:

- Information
- Settings
- Image Format
- Processing
- GPIO
- Sequencer


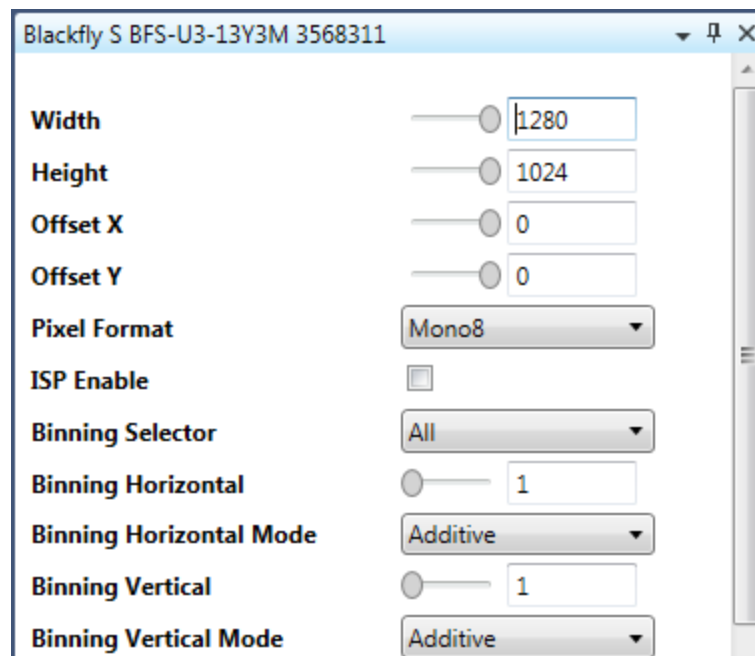 


Image Format Tab

Features can be sorted in three ways:

 
- By the XML sequence (Default)
- By categories
- Alphabetically

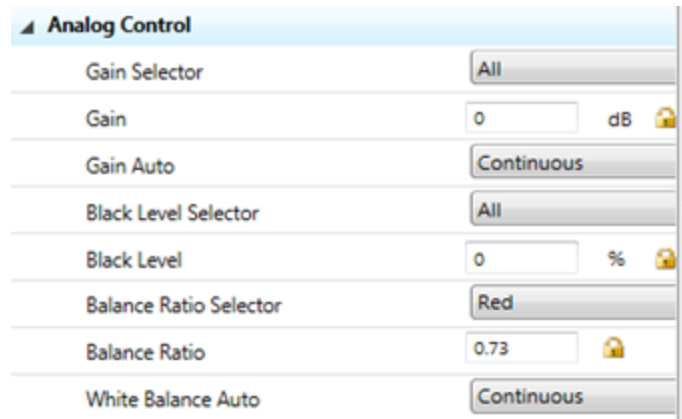

Features Sorted by XML


Features marked with a lock symbol are read only. Some features may be locked and unlocked based on the settings of other features. Some features are always read only.

 In the Features pane you can search for a feature. The search is executed as soon as you begin typing. Found items are highlighted.

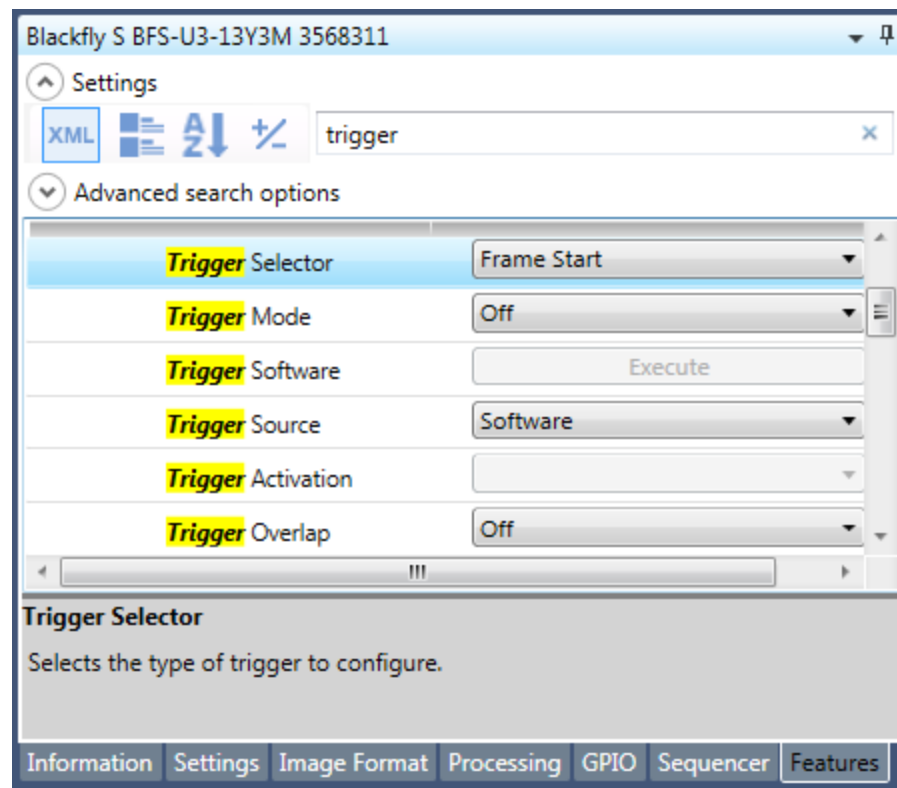


Search Execution

Selecting a feature displays a description. Hovering over a text box displays a tooltip with the feature's valid range.

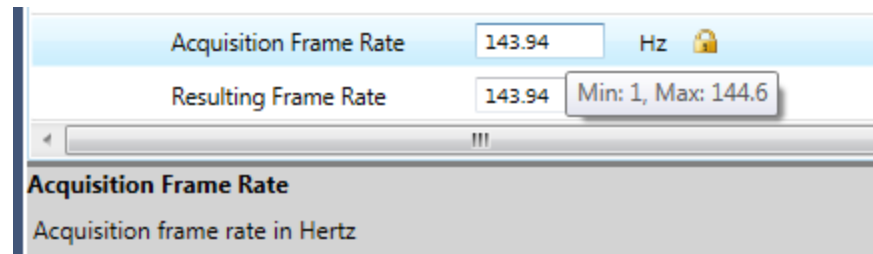

Feature Tooltips and Descriptions

 
Right-click in the Features pane to access a shortcut menu.

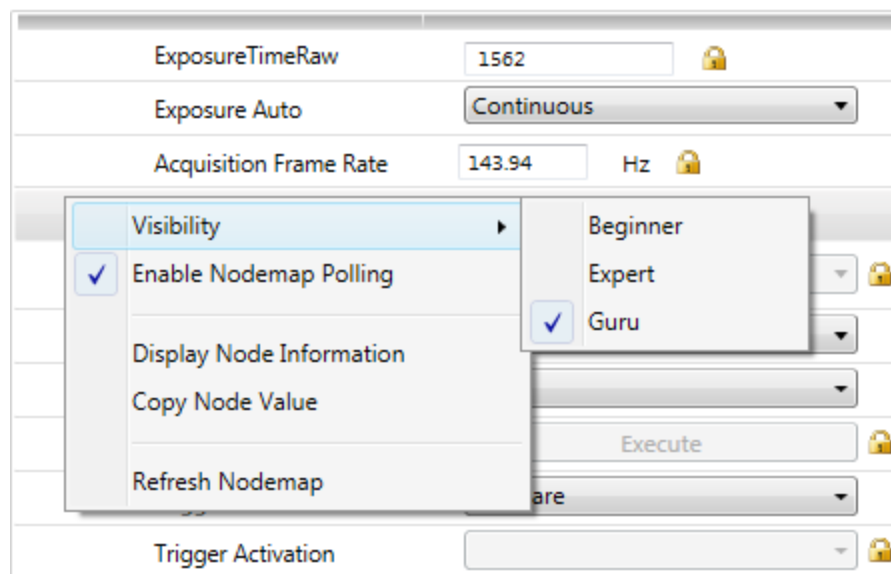

Features Shortcut Menu


From the shortcut menu you can change your visibility of the features. By default, SpinView displays everything (Guru) but this can be limited by selecting Expert or Beginner.

 From the shortcut menu, select Display Node Information to see an information pane about the feature. This information can be copied to the clipboard.

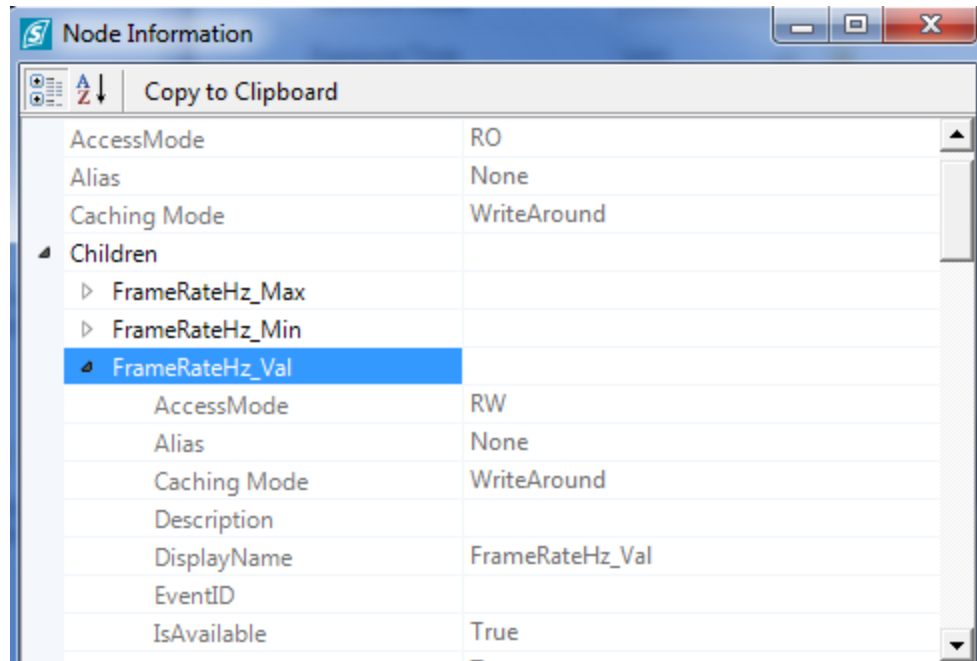

Feature Node Information


Panes and columns within panes can be resized.

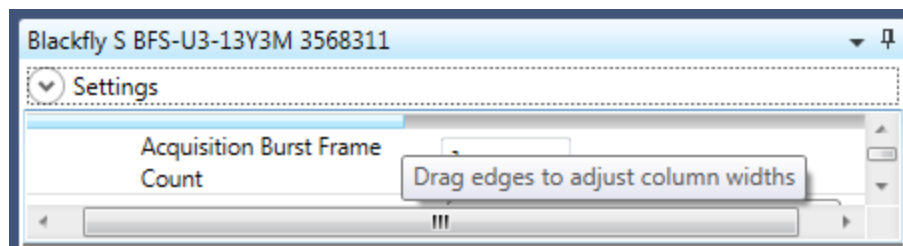


Resize Panes or Columns

Display Pane

The display pane shows the image being captured as well as information about the image settings.


To start image acquisition, double-click the camera or click 

 Right click on the *image* to access a shortcut menu from which you can save or rotate the image, stretch to fit, draw cross-hair, or change the color processing method.

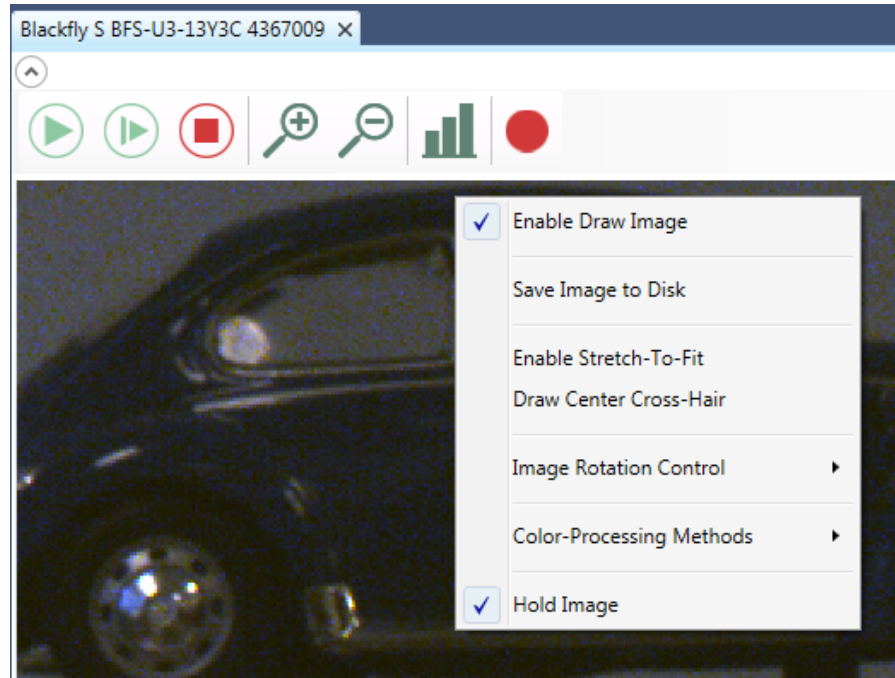


Display Pane with Image shortcut menu

 Right click on the Display Pane *frame* to access a shortcut menu from which you can change the items that appear in the status bar of the display and view image information such as chunk data.

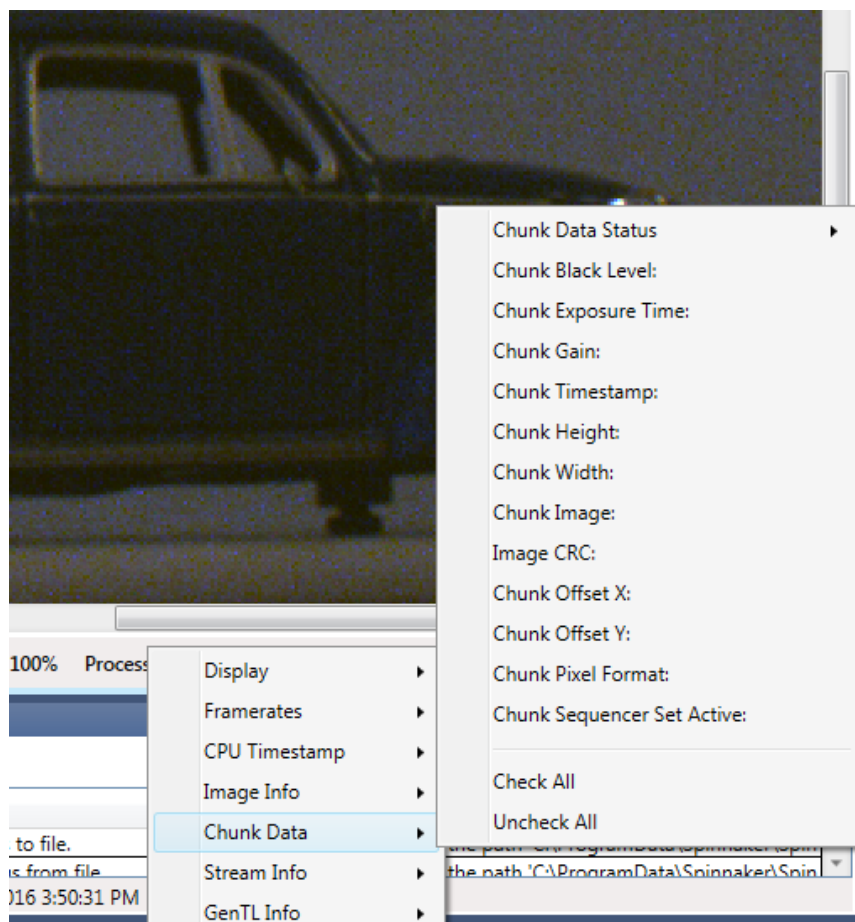

Display Pane Shortcut menu

To open the recording window, click

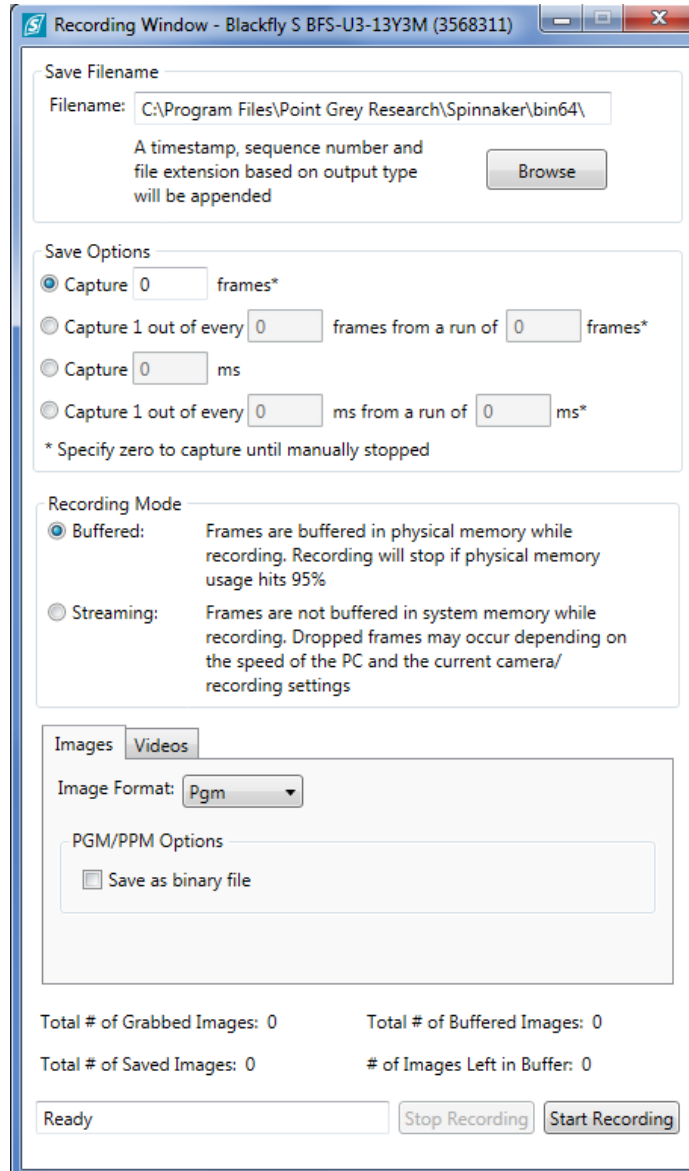Recording Window - Blackfly S BFS-U3-13Y3M (3568311)

Save Filename

Filename: C:\Program Files\Point Grey Research\Spinnaker\bin64\

A timestamp, sequence number and file extension based on output type will be appended

Save Options

☒ Capture 0 frames*

☐ Capture 1 out of every 0 frames from a run of 0 frames*

☐ Capture 0 ms

☐ Capture 1 out of every 0 ms from a run of 0 ms*

* Specify zero to capture until manually stopped

Recording Mode

☒ **Buffered:** Frames are buffered in physical memory while recording. Recording will stop if physical memory usage hits 95%

☐ **Streaming:** Frames are not buffered in system memory while recording. Dropped frames may occur depending on the speed of the PC and the current camera/recording settings

Images Videos

Image Format: pgm

PGM/PPM Options

☐ Save as binary file

Total # of Grabbed Images: 0 Total # of Buffered Images: 0

Total # of Saved Images: 0 # of Images Left in Buffer: 0

Ready Stop Recording Start Recording


Recording Window

Log Viewer

The Log Viewer displays messages, errors, and warnings. There are five levels of logging:

- Error - failures that are non-recoverable
- Warning - failures that are recoverable without user intervention
- Notice - information about events such as camera arrival or disconnect, camera initialize, camera start/stop, or modification of a feature
- Info - information about recurring events that are generated with every image
- Debug - information that can be used to troubleshoot the system

The Log Viewer menu allows you to export the information, filter, change the display, and search. Spinnaker also saves a log file to: C:\ProgramData\Spinnaker\Logs

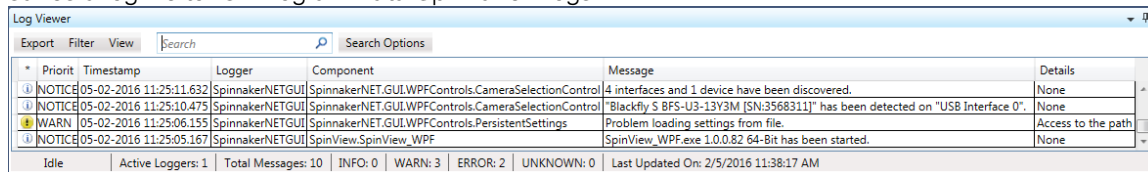

* Priorit	Timestamp	Logger	Component	Message	Details
NOTICE	05-02-2016 11:25:11.632	SpinnakerNETGUI	SpinnakerNET.GUI.WPFControls.CameraSelectionControl	4 interfaces and 1 device have been discovered.	None
NOTICE	05-02-2016 11:25:10.475	SpinnakerNETGUI	SpinnakerNET.GUI.WPFControls.CameraSelectionControl	"Blackfly S BFS-U3-13Y3M [SN:3568311]" has been detected on "USB Interface 0".	None
WARN	05-02-2016 11:25:06.155	SpinnakerNETGUI	SpinnakerNET.GUI.WPFControls.PersistentSettings	Problem loading settings from file.	Access to the path
NOTICE	05-02-2016 11:25:05.167	SpinnakerNETGUI	SpinView.SpinView_WPF	SpinView_WPF.exe 1.0.0.82 64-Bit has been started.	None


Idle | Active Loggers: 1 | Total Messages: 10 | INFO: 0 | WARN: 3 | ERROR: 2 | UNKNOWN: 0 | Last Updated On: 2/5/2016 11:38:17 AM

Updating Firmware

The latest firmware versions often include significant bug fixes and feature enhancements. To determine the changes made in a specific firmware version, consult the Release Notes.

To update your camera's firmware:

1. Download the firmware file from our [Downloads](#) site.
2. In SpinView, from the Device List, right-click on the camera and select Update Device Firmware.

If you get a Device is Active warning, disconnect the device by closing the Display pane or clicking . Right-click on the camera again.

3. Browse to select the firmware file and click Open.
4. Click Yes to continue.

NOTE: Do not disconnect the camera from the computer during the firmware update process.